


## When coating a garage with expansion/control joints.

Apply the Polyurea in the order below:

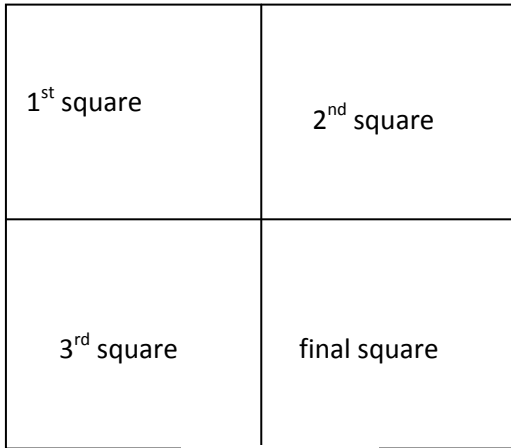

Garage Door

\*Always mix just enough to do stem walls first.


Wear spike shoes.

Do a quadrant at a time as follows:

### Step 1


Mix 1 gallon at a time

Pour out two ribbons

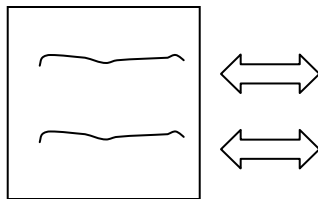

### Step 2

Spread material with an 18" roller.

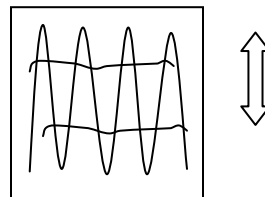


### Step 3

Roll it back and forth evenly (be consistent)

Make sure to roll out any puddles.

\*Make sure to overlap the edge of the 18" roller by 4 to 9"

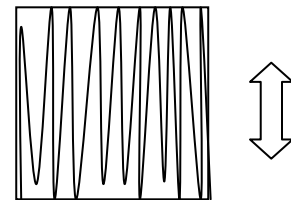


### Step 4 (Final Roll)

Cross roll evenly (be consistent)

Work your way out of the square.

\*Make sure to overlap the edge of the 18" roller by 9"

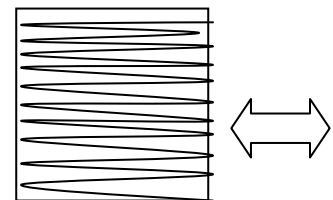

## When rolling a three car garage without expansion/control joints:

It is recommended:

\*Always mix just enough to do stem walls first.

Work the material quickly. (Put your roller skates on!)

Use an 18" roller.


Wear spike shoes.

Have a second applicator.

Figure out how much material you will need and mix it. (For example: 600sf = 3 gal)

### Step 1


Spread material out in ribbons

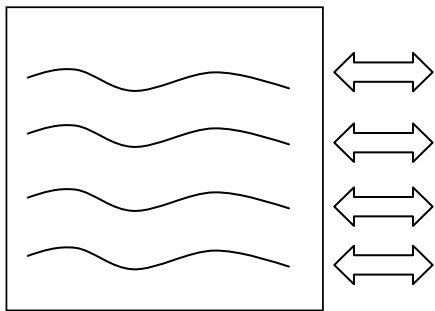

Tips: While the 1<sup>st</sup> applicator is still spreading the product in ribbons, the 2<sup>nd</sup> applicator should already start distributing the product evenly with the squeegee as follows:

## Step 2

Squeegee material evenly.

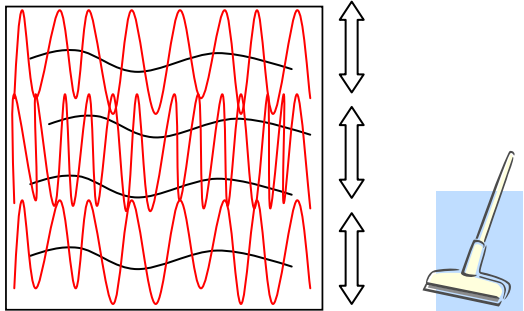


Tips: While distributing the product evenly with the squeegee, the other applicator should start rolling as follows:

## Step 3

Roll material back and forward evenly

Make sure to roll out all puddles.

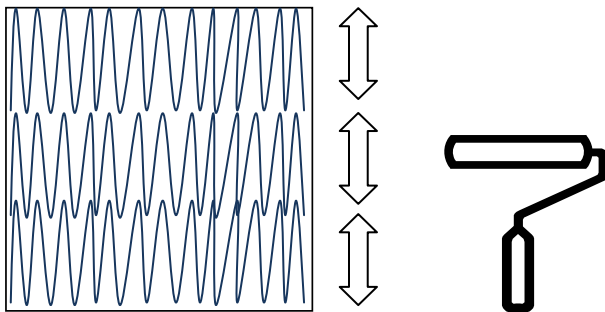


Tips:

Roll the product evenly and make sure to overlap the 18" roller by 9". When the other applicator is done with the squeegee he/she should start rolling as follows:

## Step 4 (Final Roll)

Roll material side to side

Work your way out of the garage

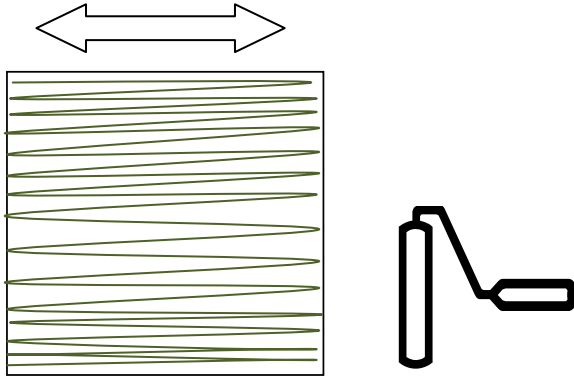

Tips:

Hold the roller perpendicular to you to. Start rolling from the left wall and roll all the way to the right wall, overlap the 18" roller by 9" and roll all the way to the left wall. Continue this until you work your way out of the garage. Remember to roll quickly and be consistent.

**Remember:** The Polyurea will dry exactly the way it looks when wet. Make sure to roll out any puddles and not to leave any roller marks.